



Adirondack Chair Assembly Instructions

Unpack and examine all parts, which consist of:



- 1 each: Seat Base
- 1 each: Back Assembly
- 2 each: Front Legs with arm brackets attached
- 2 each: Back Supports with arm support brackets attached
- 2 each: Arms
- 1 each: Hardware Kit (includes Titebond II adhesive, square drive bit and applicable stainless steel hardware).
- 1 each: Assembly Instructions.

**NOTE: ALL PARTS ARE LABELLED FOR CORRECT POSITIONING.
READ INSTRUCTIONS FULLY PRIOR TO ASSEMBLY.
CLEAN UP EXCESS GLUE AS YOU GO.**

1. Attach the front legs to the seat base. Insert screws from inside of the seat base through the predrilled holes so that the screw tips just emerge from the outside of the base leg by about 3/16" so that you will be able to correctly line up the screws with the pre-drilled holes on the front legs (see photo on following page). Apply a bead of glue around the inside of the edge of the mating surface and a small amount within that to ensure suitable adhesion. Align parts so that screws tips fit into the pre-drilled holes and tighten.



Insert carriage bolts from outside of legs with larger washer showing on outside and fasten with smaller washers and nuts on the inside. Tighten.

2. Attach the back assembly to the seat base. Insert No. 8 x 1³/₄" screws through the pre-drilled holes in the lower bracket of the back assembly until tips show. Apply glue to the notched areas on the seat base assembly, line up the screws in the pre-drilled holes and tighten so the back assembly is attached to the seat base.




3. Attach the back supports to the back assembly and the seat base. Insert screws through holes in back assembly upper bracket until tips show. Insert screws through the holes in the lower end of the back supports until tips show. Apply glue to top of the back support (angled end with pre-drilled hole) and the mating surface on the lower end of the back support where it will attach to the base leg. Line up the screw through the top bracket with the pre-drilled hole on the top of the back support and tighten. Locate the pre-drilled holes on the base leg with the screw tips protruding from the lower end of the back support and tighten. Repeat on other side. Note: Arm bracket mounted to back support should be facing out, away from the chair.



Install carriage bolts from outside of base legs through the back supports and fasten with washers and nuts. Tighten.

4. Attach the arms. Insert screws through the holes on back supports just above arm bracket and also through the holes in arm brackets on front legs so tips show. Apply glue to back end of arm (with pre-drilled hole), to the top of the arm bracket attached to the back support and to the top of the arm bracket attached to the front leg. Line up the screw through the back support with the pre-drilled hole in the back end of the arm and tighten. Locate the pre-drilled holes on the underside of the arms with the screws protruding through the arm brackets attached to the front legs and tighten.

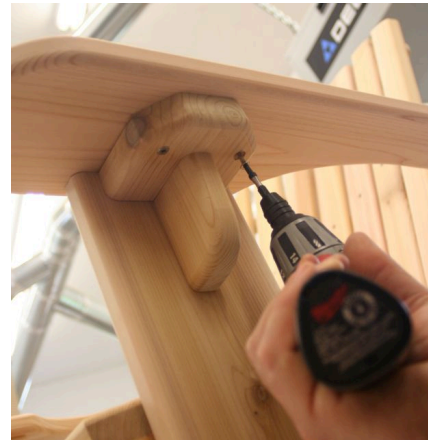

5. Do any additional clean up and finished sanding that may be required (use 120 grit sandpaper) and enjoy!

