




## Adirondack Footrest Assembly Instructions

Parts for each footrest include:

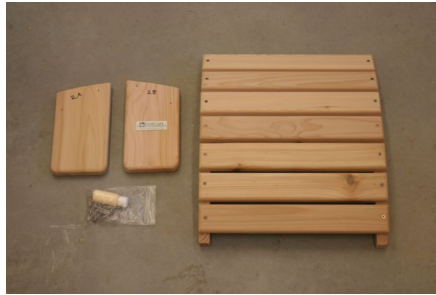

- 1 each: Footrest Assembly
- 2 each: Legs
- 1 each: Hardware Kit (includes 4 x 1<sup>3</sup>/<sub>4</sub>" stainless steel screws & Titebond II adhesive)

**NOTE: ALL PARTS ARE LABELLED FOR CORRECT POSITIONING.**



**Attach legs to Footrest Assembly.** Insert 2 x 1<sup>3</sup>/<sub>4</sub>" screws from inside of leg through pre-drilled holes until tips protrude about 3/16". Apply adhesive on one surface and line up screws with pre-drilled holes in footrest assembly. Tighten screws. Repeat for other leg. Clean up any excess adhesive. Enjoy.

